








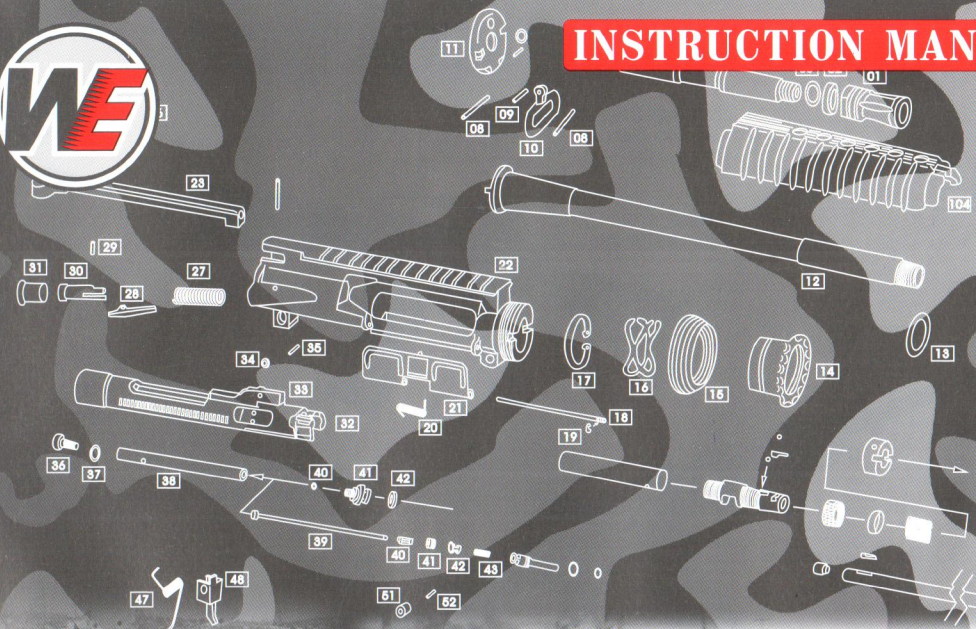



警告 ★ 正確使用空氣軟槍，可享受愉快的射擊，但是錯誤的使用方法非常危險，務必遵守下列注意事項

- **Caution!**
- ▲ **PRECAUTION**
- NE PAS UTILISER D'AUTRES PROJECTILEE QUE CEUX FOURNIS.
- △ **VORSICHT**
- Ausschliesslich fur diese Pistole bestimmte Munition verwenden.(5.5mm Kunststoffkugeln)
- **Fare attenzione**

<p>○ ★ 射擊時最好戴護目鏡</p> <p>□ Be sure to wear shooting glasses or Goggle when shooting.</p> <p>▲ Toujours porter des lunettes de tir ou de protection quand vous tirez.</p> <p>△ Zum Schiessen stets eine Schutzbrille tragen.</p> <p>■ Asegurese de llevar puestas las gafas de proteccion cuando dispare.</p> <p>○ Assicurarsi di indossare lenti di Protezione quando si spara</p> 	<p>★ 不用時要把槍置於高處 (小孩拿不到的高處)</p> <p>□ Put the gun beyond the reach of kids.</p> <p>▲ Tenir hors de portee des enfants.</p> <p>△ Pistole immer kindersicher aufbewahren.</p> <p>■ Ponga la pistola fuera del alcance de los ninos.</p> <p>○ Tenere fuori Dalla portata dei bambini.</p> 
<p>★ 不可用眼睛探視槍</p> <p>□ Don't peep at the muzzle.</p> <p>▲ Ne jamais regarder dans le canon.</p> <p>△ Nie in den lauf schauen.</p> <p>■ Jamas mire por el canon</p> <p>○ Non guardare mai dentro la canna.</p> 	<p>★ 不可朝人射擊</p> <p>□ Don't aim at people even if it is unloaded.</p> <p>▲ Ne jamais viser quel'un meme si votre pistolet est vide.</p> <p>△ Auch bei spiel-und Sportwaffen besteht Verletzungsgefahr. Auch ungeladen nie auf einen Menschen oder ein Tier richten!</p> <p>■ No apunte a personas, incluso descargado.</p> <p>○ Non puntare mai verso le persone anche se la pistola scarica.</p> 
<p>★ 射擊的瞬間，才可以把手指接近扳機擊扣</p> <p>□ Don't touch the trigger until the moment of shooting.</p> <p>▲ Ne jamais appuyer sur la gachette le rearmement.</p> <p>△ Abzug erst dann berühren,wenn Sie zum Schiessen bereit sind.</p> <p>■ No toque el gatillo hasta el momento del disparo.</p> <p>○ Non toccare il grilletto fino al momento di sparare.</p> 	<p>★ 確定射擊的方向均安全後才可以射擊</p> <p>□ After making sure that there is nobody nearby.</p> <p>▲ Toujours etre sur qu'il n y a personne dans la trajectoire de votre tir.</p> <p>△ Vergewissern Sie sich vor dem Schiessen stets, dass niemand getroffen werden kann.</p> <p>■ Antes de apuntar aseguese que no hay nadie cerca.</p> <p>○ Assicurarsi sempre che non ci sia nessuno sulla traiettoria di tiro.</p> 
<p>★ 避免粗魯的動作，發生危險</p> <p>□ Avoid a rough operation.</p> <p>▲ Ne jamais jeter le pistolet quand il est arme.</p> <p>△ Geladene Waffe stets mit Respekt Behandln. Nicht werfen oder unsanft Jandhaben.</p> <p>■ No tire ni lance la pistola, se puede disparar.</p> <p>○ Evitare azioni brusche.</p> 	<p>★ 不使用時，應將彈匣取出，並取下子彈</p> <p>□ When the gun is not in use, remove the magazine and unload BB pellets.</p> <p>▲ Quand vous ne l'utilisez plus,bien Faire attention de retirer le chargeur et de le desarmer.</p> <p>△ Zum Aufbewahren Magazin entfernen und Kugeln herausnehmen.</p> <p>■ Cuando no se este utilizando la pistola, saque todas las bolas.</p> <p>○ Quando l'arma non e in uso, estrarre il caricatore e scaricare i pallini.</p> 

INSTRUCTION MANUAL



M4

WE-M16 A3

CQBR

GAS BLOWBACK TYPE

FOR AGE 18 YEARS OR OLDER

MADE IN TAIWAN

① 各部名稱 NAME OF PARTS

M4



CQBR




① 各部名稱 NAME OF PARTS

M16 A3



② 彈匣裝填 MAGAZINE LOADING

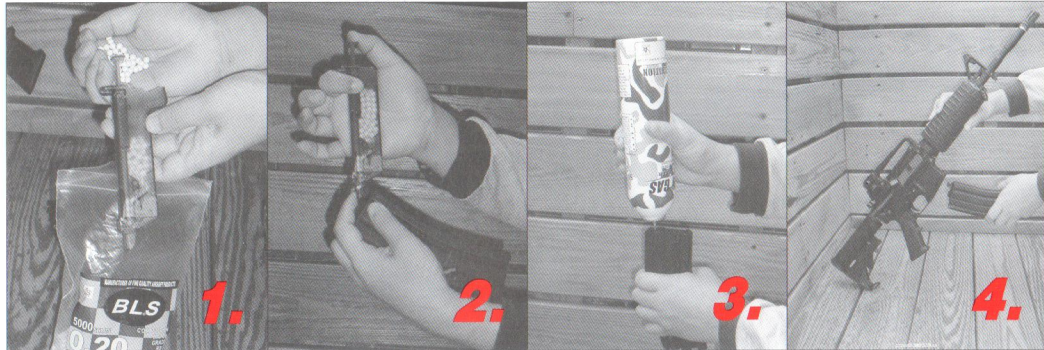

將6MMBB彈裝填入附贈的填彈器中
Fill 6mm BBs with loader.

將彈匣入彈口插入填彈器壓下填彈桿裝入BB彈到滿
Push loading rod 6 times to fill around 30 Bbs into the magazine.

將瓦斯由底版注入孔灌入
Fill gas from bottom of magazine.

將裝填好BB彈與灌好瓦斯的彈匣插入槍上完成裝彈手續
Loading magazine and ready to shoot.


④ 槍枝大部分分解 Field Strip



壓下彈匣卡榫
Push magazine release button



向下取出彈匣
Take down the magazine

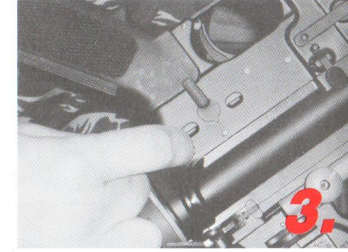

從槍身左側推出後節合銷
Push the rear locking pin from left side



再從右側完全拉出後結合銷
Pull the rear locking pin from right side.



從槍身左側推出前節合銷
Push the front locking pin from left side.



再從右側完全拉出前結合銷
Pull the front locking pin from right side.



拉出三分之二拉柄向後拉出槍機
Pull out half the charging handle with bolt. Remove the bolt carrier first and charging after.




將上下槍身分開
Take down the lower receiver




大部分解完成
Done


③ 槍枝上膛發射前準備 PREPARE FOR SHOOTING

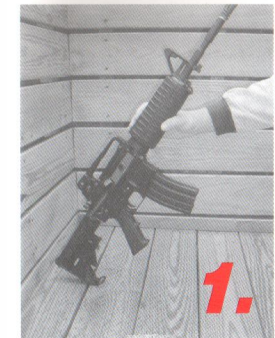


插入充填完BB彈與瓦斯的滿彈匣
Insert the loaded magazine into the lower receiver.

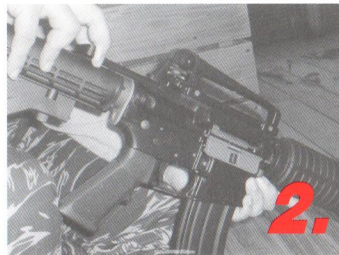


拉拉柄向後到底
Pull the Charging handle to the end.

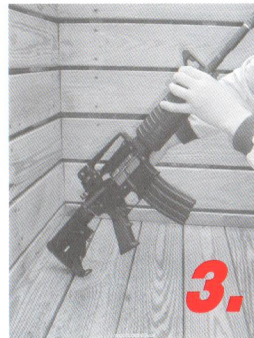

猛然放開拉柄讓槍機復位推BB彈上膛
Quick release charging handle for loading Bbs into the Hop bucking.


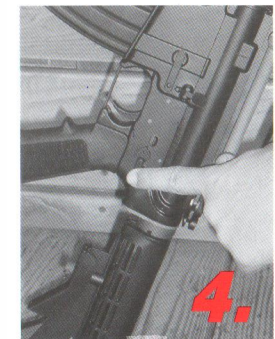


將保險鈕轉至保險(SAFT)位置
Set the fire selector to SAFE position.

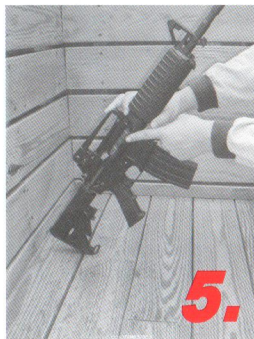

關閉防塵蓋
Close the dust cover.


爆炸圖 EXPLOSION

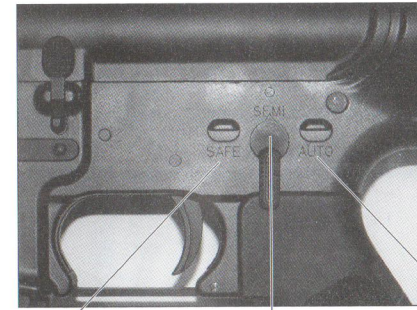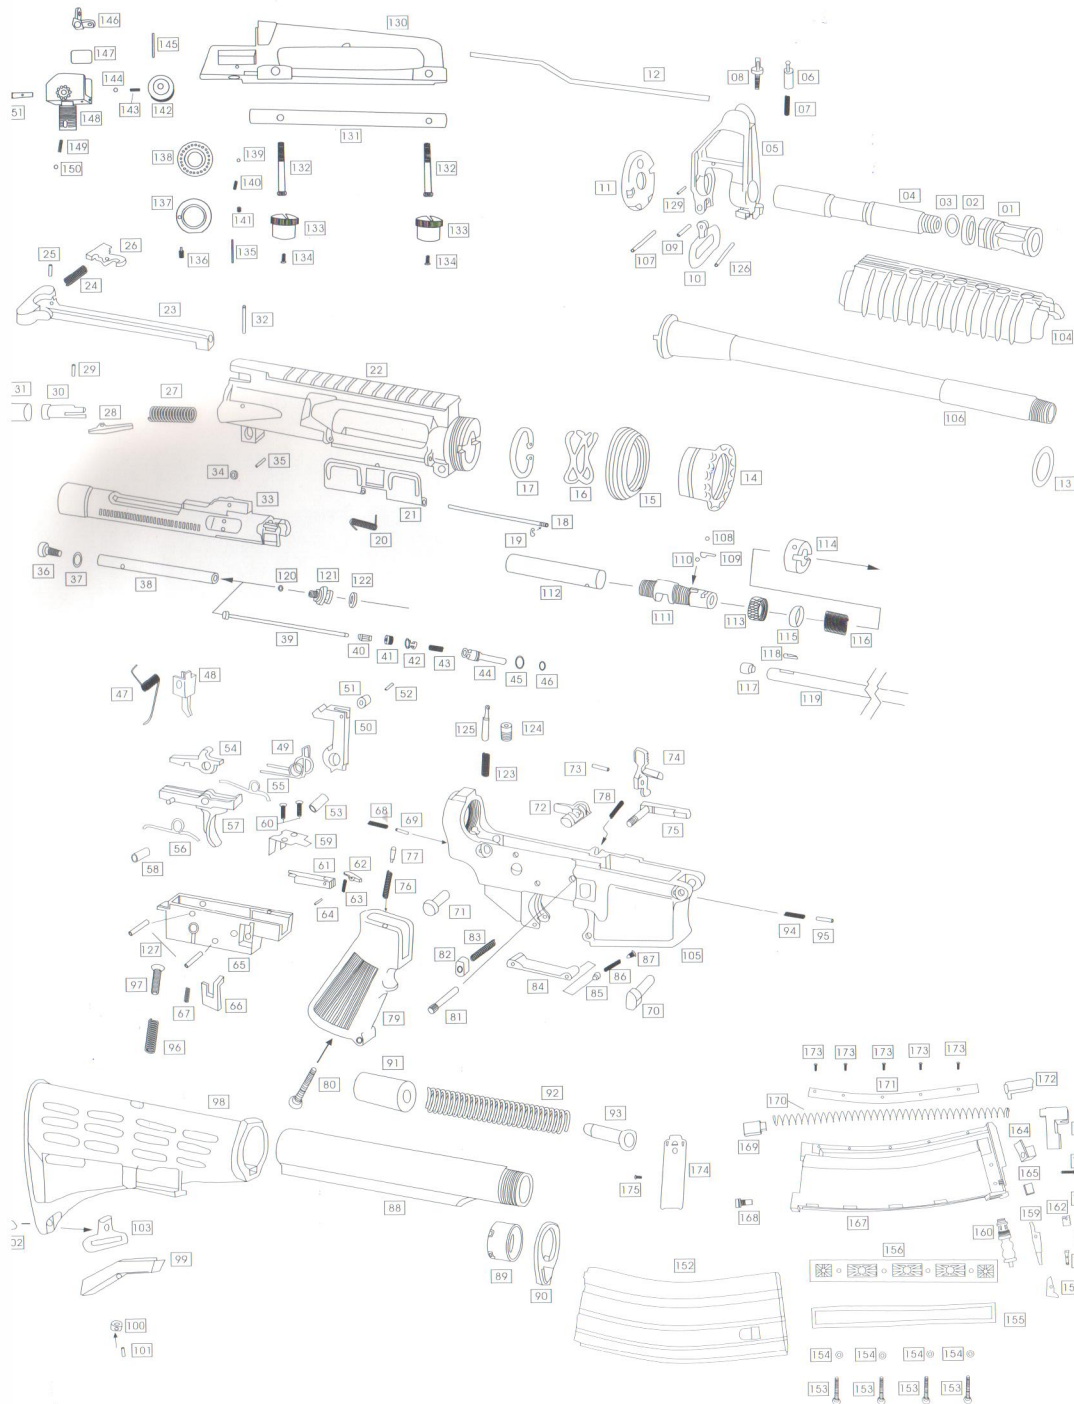



保險控制
Safe control

半自動控制
Semi-automatic control

自動控制
automatic control

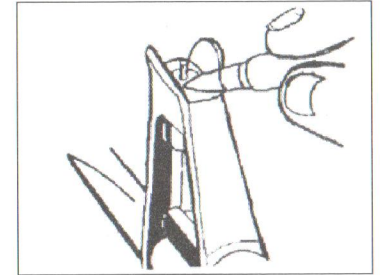

準星的調整
To adjust front sight

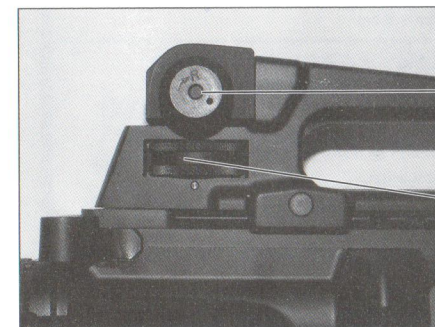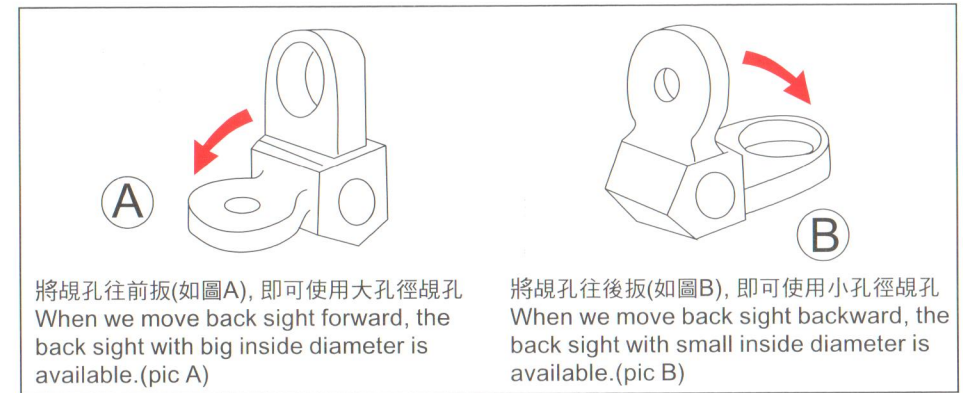

將覘孔調整鈕往順時鐘或逆時鐘, 即可左移或右移覘孔
Turn adjusting knob counterclockwise or clockwise to move backsight left or right.

將覘孔調整鈕往順時鐘或逆時鐘, 即可向上或向下覘孔
Turn adjusting knob counterclockwise or clockwise to move backsight up or down.